

MOVOFILMS

DSLR Rig-120 Camera Shoulder Mount

MF-RIG-120

INSTRUCTION MANUAL



WHAT'S IN THE BOX

Please inspect the contents of your shipped package to ensure you have received all that is pictured and listed below.

SHOULDER RIG

- 1x Shoulder Pad
- 1x Counter weight with 15mm Weight Clamp
- 2x Telescopic Handles
- 5x 300mm Aluminum Rods
- 2x 150mm Aluminum Rods
- 2x 100mm Aluminum Rods
- 1x 15mm Height Riser
- 1x 15mm Camera Mounting Plate
- 1x 15mm Tripod Mounting Plate
- 2x 15mm Junction Rod Adapter
- 1x 15mm Supporting Rod Adapter
- 1x Straight Bracket



DSLR/DSLM RIG 120

Shoulder pad - 15mm diameter, Support Rods -300mm, 150mm & 100mm long, Quick Release Plate, Quick Lock Handles with Comfort Grips, Center to Center Rail Distance of 60mm.



ASSEMBLING RIG-120

The 15mm parts of the DSL Rig-120 are easily fitted on the 15mm rods. Here are the steps to follow in making the DSLR Rig-120.

- Attach the Tripod Mounting plate on the tripod with the ¼" screw and then insert the 15mm rods into it as shown.
- Now insert the 15mm height riser with the 100mm long rails from the opposite side of the tripod mounting plate.
- Now insert the 15mm straight bracket into the base rails from the back side.
- Insert the remaining 2 pieces of 300mm rails into the right side of the straight bracket.
- Mount the support rod adapter, shoulder pad and weight clamp with weights attached.



MOVOFILMS DSLR RIG-120

- Attach your camera to the mounting plate and slide the 15mm base onto the 100mm rails.
- Insert the 15mm junction rod adapter in preparation to mount the handles.



NOTES

- *You can adjust camera height in the riser as required.*
- *Horizontal camera adjustment can be made by loosening the bolts on the mounting plate with the supplied Allen key and then moving the plate to a new position. Retighten to secure as shown.*
- *You can also remove this screw when using a DSLR/DSLM/Camcorder.*



**YOUR MOVOFILMS DSLR RIG-120
ALL DRESSED UP AND READY TO GO**



Exclusive of Camera

WARRANTY

We offer a limited time warranty for our products. For Mechanical products we provide a 6 month warranty & for electronic products we provide a 3 month warranty from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we donot supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product , or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, Nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to [Contact us](#) immediately and we shall do our best to help you out.

For any other assistance you can reach us via email.

MOVOFILMS